


TISI 泰國

產品類別

- **Standard : TIS 1195-2536**  
Mains Operated Electronic and Related Apparatus or Household and Similar General Use  
電源和相關設備或家用、類似的一般用途
- **Standard : TIS 2217-2548**  
SECONDARY CELL AND BATTERIES CONTAINING ALKALINE OR OTHER NON-ACID ELECTROLYTES-SAFETY REQUIREMENTS FOR PORTABLE SEALED SECONDARY CELLS  
二次電池和含有鹼性或其他非酸性電解質的電池 - 用於便攜式密封二次電池的安全要求

申請流程

一般件：14 周  
急件：10 周

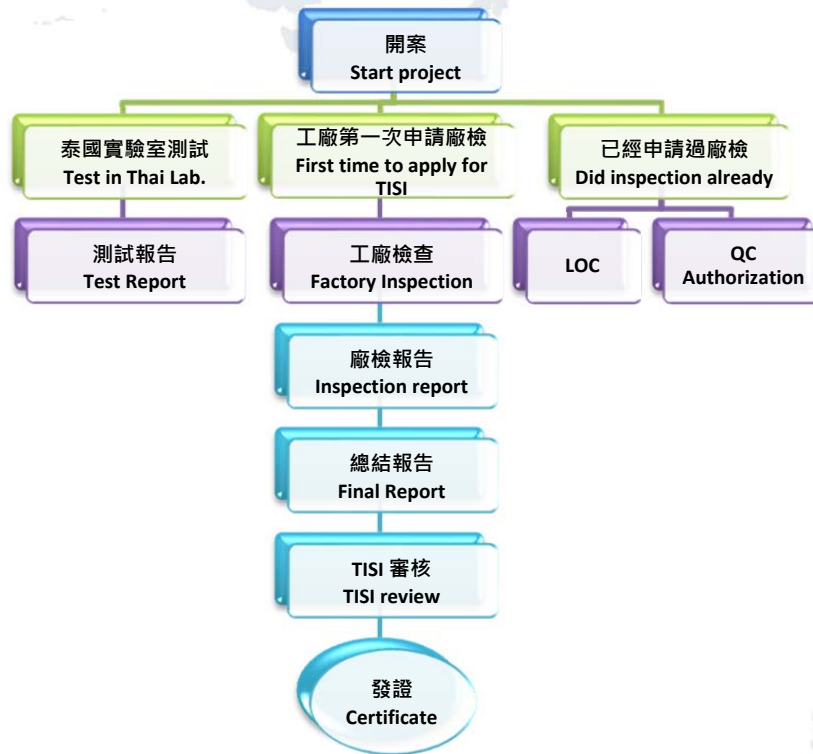

認證 Logo

After TISI Application Approved:  
Needs to show TISI logo with name of THAI Local Rep. after certificate issued.  
發證之後需要標上 TISI logo 以及泰國標準、泰國代理商資訊



TIS. 2217- 2548

← THAI standard for Battery

xxxxxxxxxxxxxxxx ←THAI Local Rep. or exporter

**文件**

1. Battery Spec.
2. Cell Spec.
3. Label
4. Layout
5. Schematic
6. Packing Drawing
7. Barcode / Date code
8. BOM
9. ISO9001
10. Charging diagram
11. Cell CB
12. Samples (35-40pcs)

**廠檢內容**

Item	Requirement 要求項目
1	1.1 Purchasing control process (採購控制流程) 1.2 Incoming inspection process (來料檢驗流程) 1.3 Supplier evaluation process (供應商評鑑流程) 1.4 Training for employees responsible for incoming inspection (進料檢驗培訓流程管理) 1.5 Document and record control process (文件和紀錄管控制程序) 1.6 Identification and traceability process (來料識別及追溯程序)
2	2.1 Production process control and testing. (產線生產流程之管控和測試) 2.2 Training for employees responsible for production line (產線產品檢驗培訓流程管理) 2.3 Document and record control process (文件和紀錄管控制程序) 2.4 Identification and traceability process (產線產品的識別及追溯程序)
3	3.1 Finished product control and testing. (成品之管控和測試) 3.2 Training for employees responsible for finished product (完成品檢驗培訓流程管理) 3.3 Document and record control process (文件和紀錄管控制程序) 3.4 Identification and traceability process (完成品識別及追溯程序)
4	Non-Conforming control for: (不合格品管控) 4.1 Incoming quality control (來料品質管理) 4.2 Production quality control (產線品質管理) 4.3 Finish goods quality control (完成品品質管理) 4.4 Customer Complain (客戶投訴) 4.5 Corrective and preventive action (矯正以及預防措施) 4.6 Document and record control process (文件和紀錄管控制程序)
5	5.1 Calibration and control of testing equipment (測試儀器之校驗和管制) 5.2 Training for employees responsible for instrument calibration (進料檢驗培訓流程管理) 5.3 Document and record control process (文件和紀錄管控制程序)
Others	ISO9001 (English Version 英文版) BOM Organization Chart (組織結構圖) Factory information (工廠資訊)